

## Dragonback Tutorial

Rings used are 20 AWG by 4mm ID

Start with a simple strip of Euro 4-1 roughly 30% longer than the finished length. Weave will “draw up” and tighten as you go.




Start adding rings on the side like the copper one shown below.




Continue adding rings along the side as shown.



Finish adding rings along the entire side of your weave.

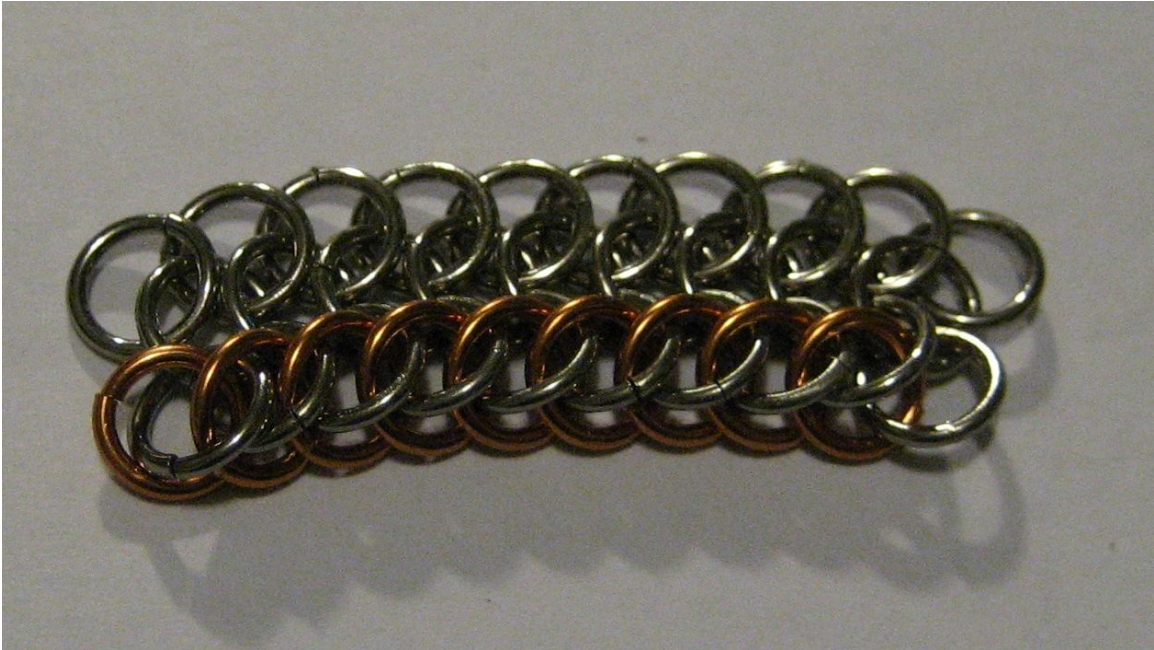

Do the same along the other side.

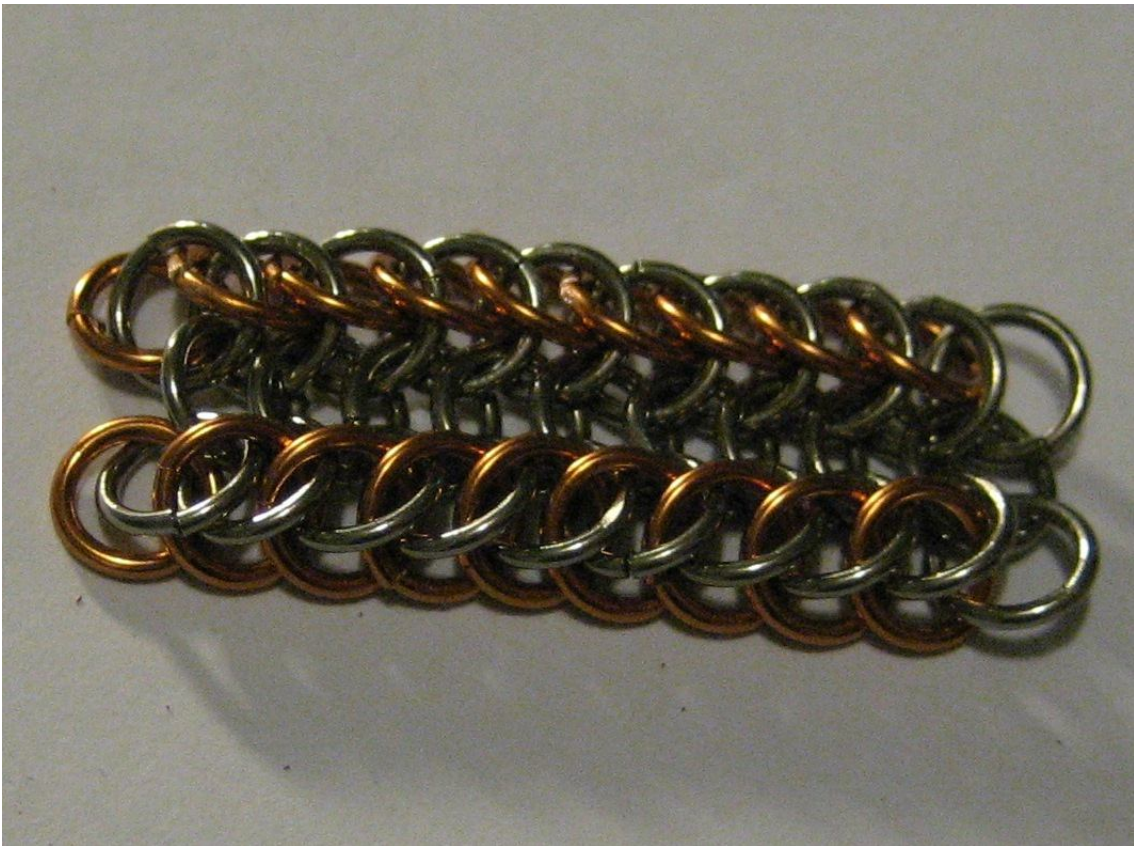

Next catch the two sets of rings that you just put in along both sides with another section of Euro 4-1. Silver ring below shows how to start.



Continue along the entire length.



All images and text remain the property of the author and are reproduced here with permission. You must obtain permission from the author to copy and/or distribute this tutorial.